



Audi B9 S4 3.0 TFSI Cold Air Intake System, Carbon Fiber



Supplied Parts:

- 034Motorsport Carbon Fiber Airbox
- 034Motorsport Carbon Fiber Inlet Pipe
- 034Motorsport 5" Inlet Conical Air Filter
- Silicone coupler
- Hose Clamps (3)

Tools Needed:

- Hands (2) (*Opposable thumbs are required!*)
- T25 Torx Bit
- 7mm socket
- 8mm Socket


034Motorsport's X34 Carbon Fiber Cold Air Intake System for the B9 Audi S4/S5 is engineered to provide horsepower and torque gains throughout the powerband, while improving aesthetics in the engine bay. Our intake offers OEM+ fit and finish that fits perfectly into the area of the factory air box.

Installation of this upgrade is a straightforward process that will take approximately half an hour to complete.

Step 1 – Allow the engine to sufficiently cool before tackling installation, and be sure to open the hood for easy access to the intake. Make sure you have all tools necessary for installation of the X34 Carbon Fiber Cold Air Intake.



Step 2 – Using your two opposable thumbs, remove the engine cover.

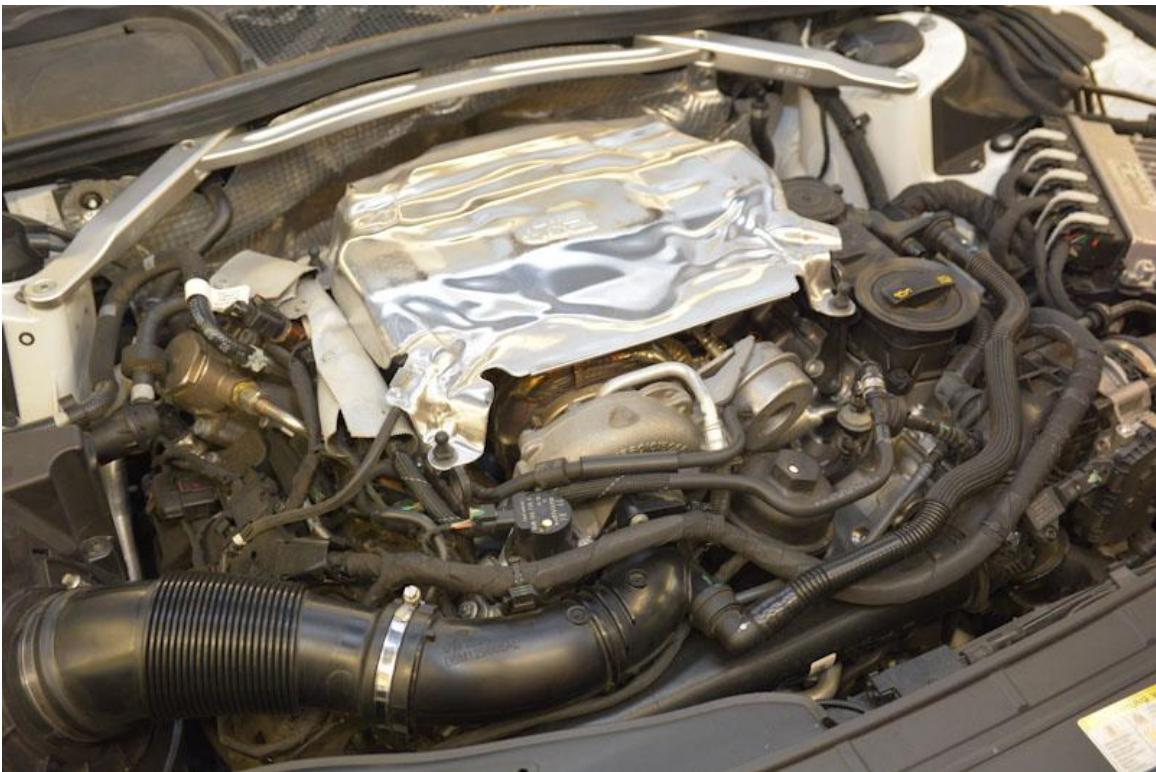

Step 3 – Remove hood release lever by pressing button on back side of lever and pulling the lever upward.



Step 4 – Remove cover by gently prying up on front edge to release clips, and slide forward and out.




Step 5 -Using the T25 Torx bit, unscrew the two screws holding the factory air duct to the radiator support.



Step 6 - Remove air duct.



Step 7 – Using a 7mm socket, loosen the hose clamp attaching the air filter hose from the turbo inlet pipe.

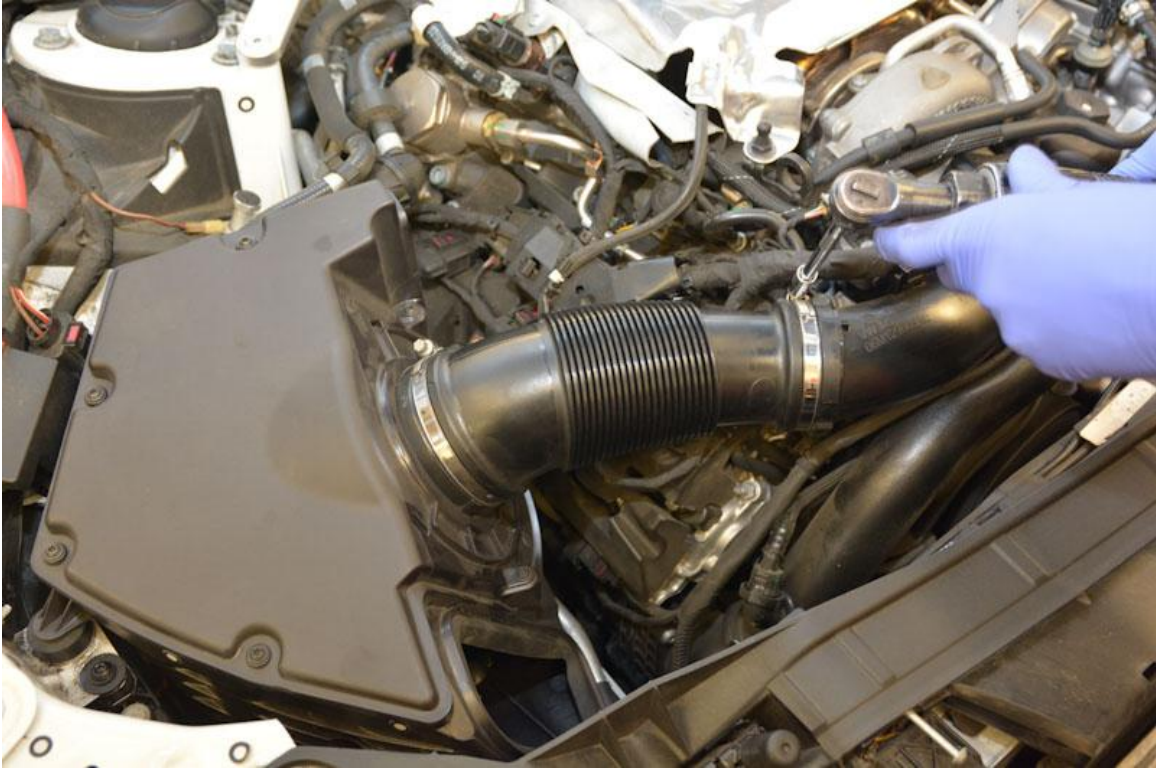

Step 8 – Remove the airbox from the car by simply lifting up and out.



Step 9 – Transfer the 3 rubber mounts from the stock airbox, to the 034Motorsport X34 Carbon Fiber Cold Air Intake.



Step 10 – Install intake tube/filter assembly into airbox.



Step 11 – Install assembly, connecting inlet tube to turbo inlet, and pushing down on airbox to insert rubber mounts into receptor holes.



Step 12 – Tighten hose clamp, reinstall air duct (step 5/6), cover (step 4) and hood release lever (step 3).

Step 13 – Take a step back and enjoy the improved aesthetics and performance you've given your 3.0 TFSI. Then get on the road and enjoy!

