


SCORPION // FITTING INSTRUCTIONS

HAND BUILT

Car	Audi S3 (8P)	Part No.	SAUC074			
Year	2006-2012	Fit Kits	262FK			
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 76mm / 3"			
Estimated Fitting Time: 3 Hours						

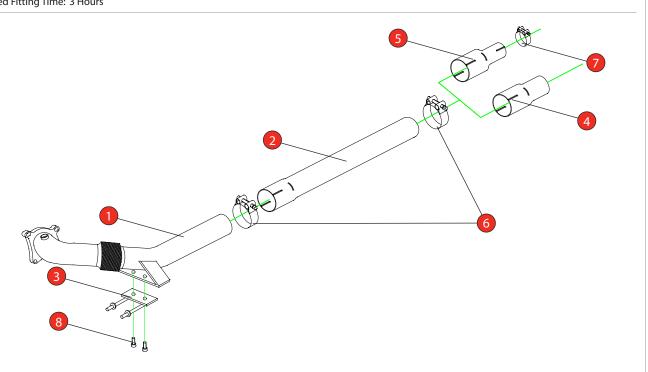

NO.	PART NO.	DESCRIPTION	QTY	CLASSIFICATION	Motorsport Use Only	
1	595VW	De-cat Downpipe	1	HOMOLOGATED	No	
2	596VW	Link Pipe	1	DATE	03/01/17	
3	677VW	Mounting Bracket	1	ISSUE	01	
Fit Kit				AUTHORISED	M.Ydlibi	
4	AD87	Adaptor (USE TO FIT TO SCORPION SYSTEM)	1			
5	AD88	Adaptor (USE TO FIT TO O.E SYSTEM)	1			

Before removing the original system the hose attached to the valve needs to be disconnected and fastened out of sight.


2

1

2

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

59-63mm Clamp (USE TO FIT TO O.E SYSTEM)

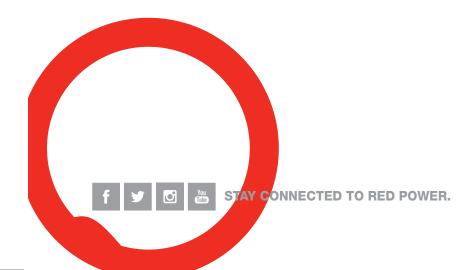

79mm H/D Clamp

M8 x 16mm Cap Head bolt

6

7

8

Z016.10062

Z016.10001

Z017.10808

