


Car	Audi RS6/RS7 (C7) Audi S6/S7 (C7)	Part No.	SAUX087
Year	2012-2018	Fit Kits	435FK
Notes	Where not supplied use original fittings. Ensure lambda extension cables are routed away from hot/moving parts using supplied tie wraps.	Features	Pipe Diameter:- 76mm

Estimated Fitting Time: 6 Hours

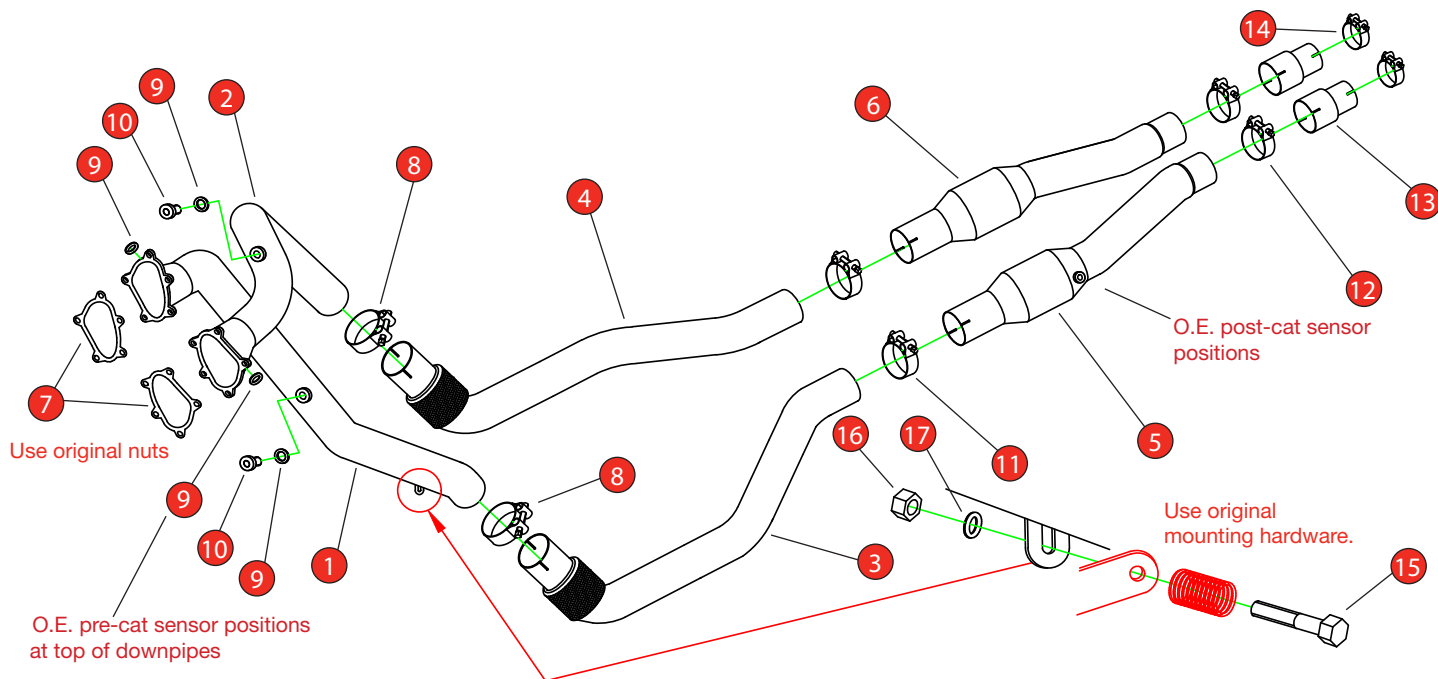

NO.	PART NO.	DESCRIPTION	QTY
1	926AU	L/H Downpipe	1
2	927AU	R/H Downpipe	1
3	928AU	L/H Front Flex Pipe	1
4	929AU	R/H Front Flex Pipe	1
5	930AU	L/H Sports Cat Section	1
6	931AU	R/H Sports Cat Section	1
Fit Kit :- 435FK			
7	Z024.11153	Gasket (Turbo)	2
8	Z016.10069	79-85mm Clamp	2
9	Z017.10218	M18 x 24 x 1.5mm Copper Washer	4
10	Z017.12718	M18 x 1.5 Blanking Plug	2
11	Z016.10062	79.2mm OD Clamp	2
12	Z016.10063	72mm H/D Clamp	2
13	AD76	Adaptor (USE TO FIT TO O.E. SYSTEM)	2
14	Z016.10001	59-63mm Clamp (USE TO FIT TO O.E. SYSTEM)	2
15	Z017.10057	M8 x 60mm Hex Bolt	2
16	Z017.10826	M8 Nut	2
17	Z017.10831	M8 x 17mm Washer	2
18	Z024.11185	L/H Lamda Extension (Not Shown)	1
19	Z024.11186	R/H Lamda Extension (Not Shown)	1
20	Z017.12732	100 x 2.5mm Black Tie Wrap (Not Shown)	10

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

CLASSIFICATION	Motorsport use only
DATE	08/07/24
ISSUE	01
AUTHORISED	G.O'Shea

IMPORTANT:

Lambda extension cables are used to relocate the factory post-cat lambda sensors to the new catalyst position under the vehicle.

O.E post cat sensors must be fitted into parts 5 & 6 on the diagram above.



STAY CONNECTED TO RED POWER.