



<b>Car</b>	Audi S3 Quattro 3Door & Sportback 8V / Saloon 8V, VW Golf MK7 R / Estate	<b>Part No.</b>	SVAGC005
<b>Year</b>	13-16 / 13-16 / 14-17 / 15-17	<b>Fit Kits</b>	184FK
<b>Notes</b>	Where not supplied use original fittings	<b>Features</b>	Pipe Diameter:- 76mm

Estimated Fitting Time: 2 Hours

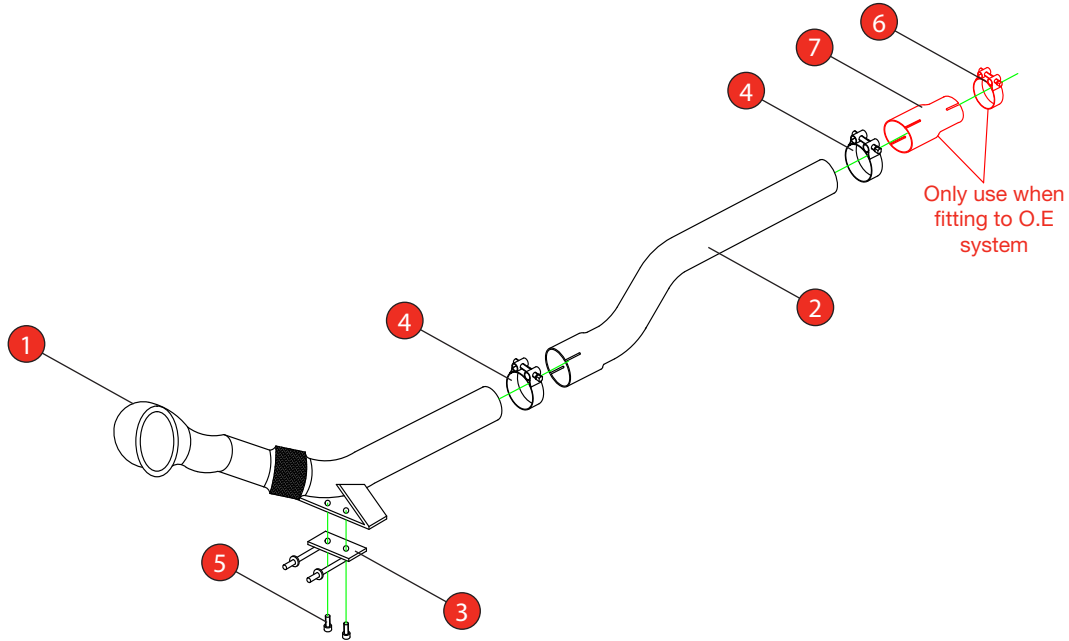



NO.	PART NO.	DESCRIPTION	QTY	CLASSIFICATION	Motorsport Use Only
1	544AU	Turbo Downpipe De-cat	1	HOMOLOGATED	No
2	546AU	Front Pipe	1	DATE	17/11/17
3	562AU	Mounting Bracket	1	ISSUE	04
<b>Fit Kit</b>					
4	Z016.10062	79mm H/D Clamp	2	AUTHORISED	M.Ydlibi
5	Z017.10808	M8 x 16mm Cap Head Bolts	2		
6	Z016.10064	63-68mm H/D Clamp (USE TO FIT TO O.E SYSTEM)	1		
7	AD69	Adaptor (USE TO FIT TO O.E SYSTEM)	1		

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

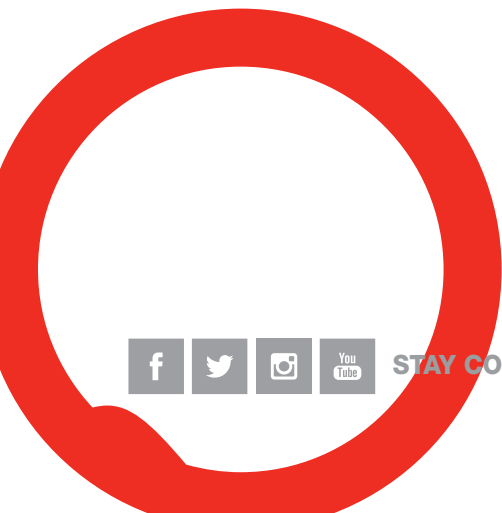

STAY CONNECTED TO RED POWER.

<b>Car</b>	Audi S3 Quattro 3Door & Sportback 8V / Saloon 8V, VW Golf MK7 R / Estate	<b>Part No.</b>	SVAGC005
<b>Year</b>	13-16 / 13-16 / 14-17 / 15-17	<b>Fit Kits</b>	184FK
<b>Notes</b>	Where not supplied use original fittings.	<b>Features</b>	Pipe Diameter:- 76mm

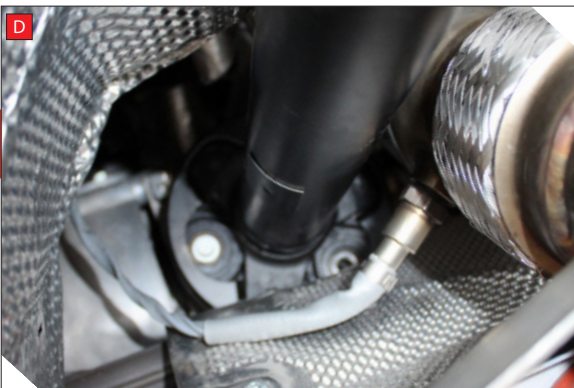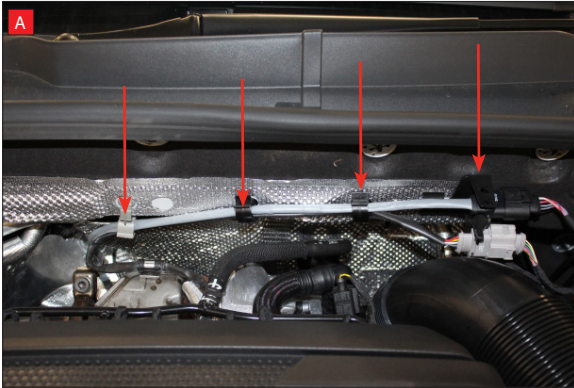

A) Remove Lambda Probe from OE catalyst, then remove cable from clips indicated. (x4)

B) Feed Lambda cable down the right hand side (as you look at the engine)

C) Ensure Lambda cable misses the gear cables, pass to the right hand side (as you look at engine)

D) Take Lambda cable under the engine. Fit probe into Sensor boss and tighten.

Feed cable this side.

